

# UniRec CZ

MODBUS Data Recorder

# Operation Manual


This brief manual is primarily meant for quick reference to wiring connections and parameter searching. For more details on operation and application; please log on to [www.ppiindia.net](http://www.ppiindia.net)

**PPI**

101, Diamond Industrial Estate, Navghar,  
Vasai Road (E), Dist. Palghar - 401 210.  
Sales : 8208199048 / 8208141446  
Support : 07498799226 / 08767395333  
E: [sales@ppiindia.net](mailto:sales@ppiindia.net), [support@ppiindia.net](mailto:support@ppiindia.net)

Jan 2022


## FRONT PANEL LAYOUT

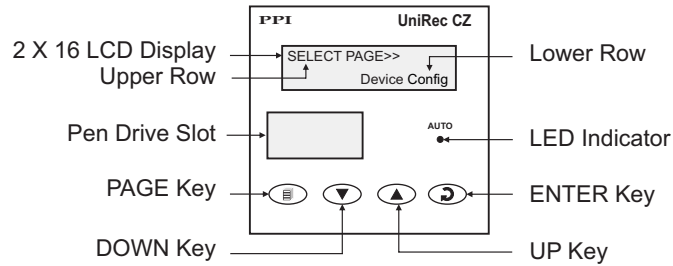

### Keys Operation

Symbol	Key	Function
	PAGE	Press to enter or exit set-up mode.
	DOWN	Press to decrease the parameter value. Pressing once decreases the value by one count; holding pressed speeds up the change.
	UP	Press to increase the parameter value. Pressing once increases the value by one count; holding pressed speeds up the change.
	ENTER	Press to store the set parameter value and to scroll to the next parameter on the PAGE.

## ELECTRICAL CONNECTIONS

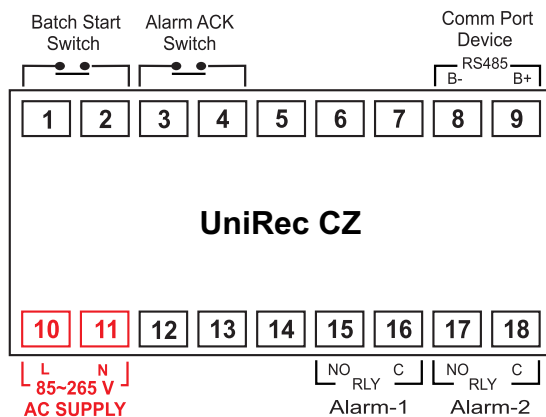

## WIRING CONNECTION

