


STH 8W Wall Mount T+RH Transmitters

STH 8WC (4-20 mA) / STH 8WV (0-5 VDC) /
STH 8WD (RS485 MODBUS)


Installation Manual



► Dimensions (mm)

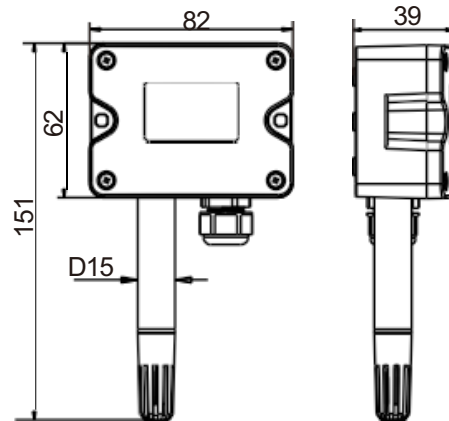


► Installation & Mounting Holes

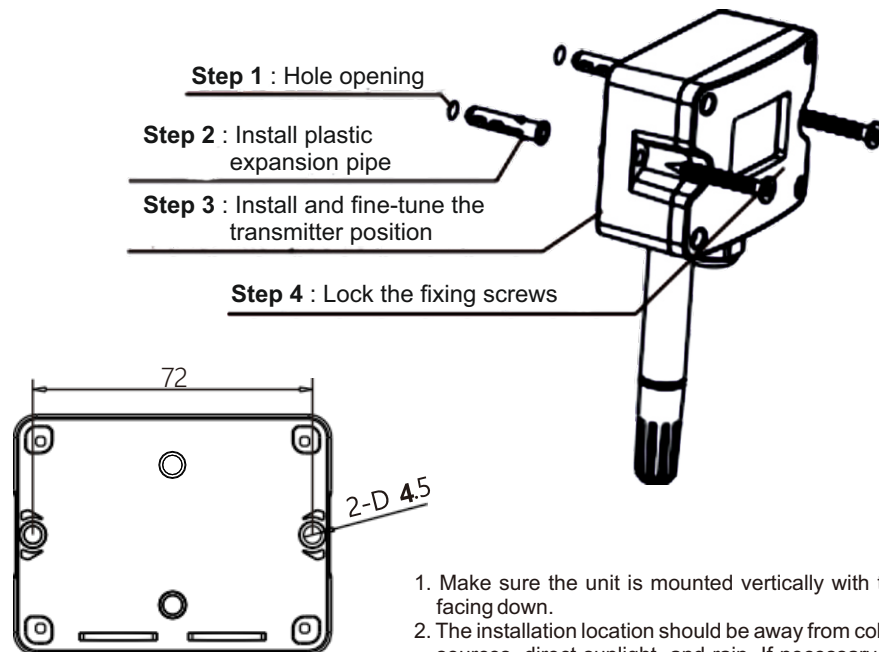

1. Make sure the unit is mounted vertically with the prob facing down.
2. The installation location should be away from cold & heat sources, direct sunlight, and rain. If necessary install a sunshade or rain cover.


► Wiring Instructions

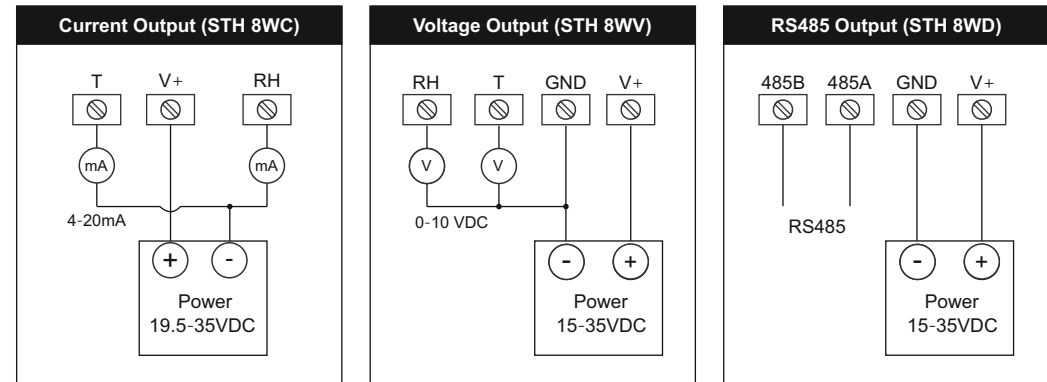

1. Open the top cover, connect the power cable and the signal wires to the bottom box through the waterproof cable gland.
2. Make connections as per the above figures and fix the top cover back to its original position.
3. Pay attention to the sealing between the waterproof cable gland and the bottom box (with a sealing ring), and the sealing between the upper cover and the bottom box (with a sealing ring), so that the overall protection level meets IP65.

► Temperature Range Setting


For the Voltage (STH 8WV) and Current (STH 8WC) versions, the output signal can be programmed to match seven different temperature ranges using a set of 3 DIP switches as shown below. Note that the working temperature range is -20 to 60 °C. The range setting is for mA / V signal output proportionality only. The default DIP setting is for -20 to 60 °C.

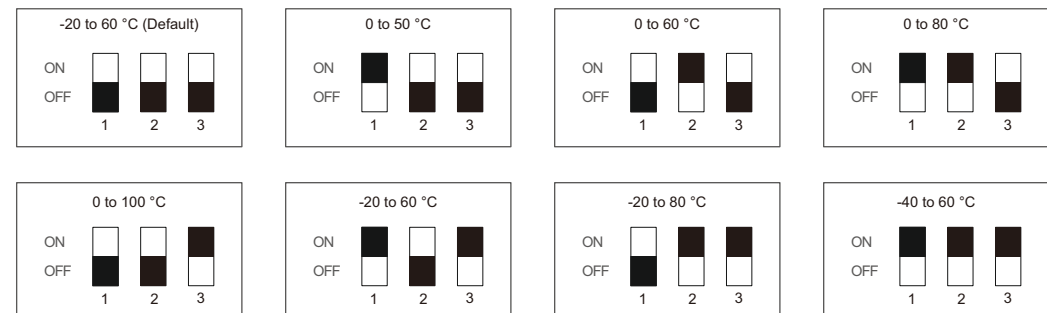



Note : Power cycle the device for the changes to take effect.

► RS485 Parameter Settings




For the MODBUS output model (STH 8WD), a set of eight DIP switches is provided for the manual setting of device ID and the Baud Rate. The first 6 switches (1 to 6) are used for device ID while the last 2 switches (7 & 8) are used for Baud Rate setting.

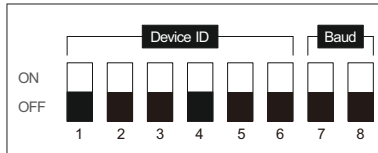

For Device ID, switches 1 to 6 represent binary digits with switch-1 as LSB and switch-6 as MSB. The switch ON & OFF positions are treated as 1 & 0, respectively. The settable ID range is 1 to 63. The examples below show IDs set to 1 and 17.

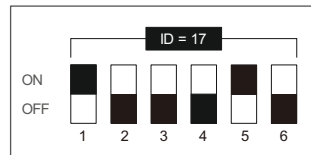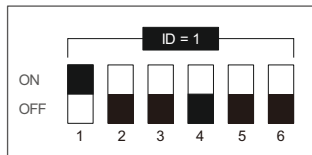


Use switches 7 and 8 for setting the baud rates to 9600, 19200, and 38400 as shown below.

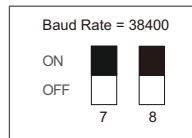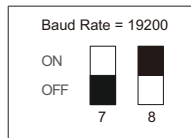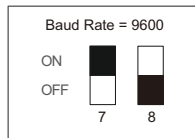

Notes :

1. Power cycle the device for the changes to take effect.
2. A fixed None Parity is used.
3. For setting the Device ID and the Baud Rate using MODBUS addresses, set all 8 DIP switches to OFF positions as shown below.

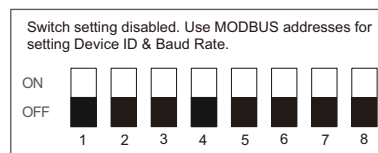

► MODBUS Register Addresses

Applicable for MODBUS output model (STH 8WD) only. Make sure that the 8 DIP switches are set to OFF positions.

Parameter	Address	R/W	Description	Default
Baud Rate	3	R/W	1 = 9600 bps, 2 = 19200 bps, 3 = 38400 bps, 4 = 115200 bps	9600 bps
Slave ID	4	R/W	1 to 255	1
Temperature (16 Bit Signed Integer)	1	R	0.1 °C Resolution. Examples : 0x00C4 = 19.6 °C 0xFFBE = -6.6 °C	NA
Humidity (16 Bit Signed Integer)	2	R	0.1% Resolution. Example : 0x0134 = 30.8%	NA
Temperature (32 Bit Float)	6	R	0.01 °C Resolution. Examples : 0x41200000 = 10.00°C 0xC1A00000 = -20.00°C	NA
Humidity (32 Bit Float)	8	R	0.01% Resolution. Example : 0x41200000 = 10.00%	NA
Sensor Status	10	R	0 = OK, 1 = Fault	NA

PPI

101, Diamond Industrial Estate, Navghar,
Vasai Road (E), Dist. Palghar - 401 210.
Sales : 8208199048 / 8208141446
Support : 07498799226 / 08767395333
E: sales@ppiindia.net, support@ppiindia.net

May 2025